



TOOL HOLDER 外徑車刀



SDJC

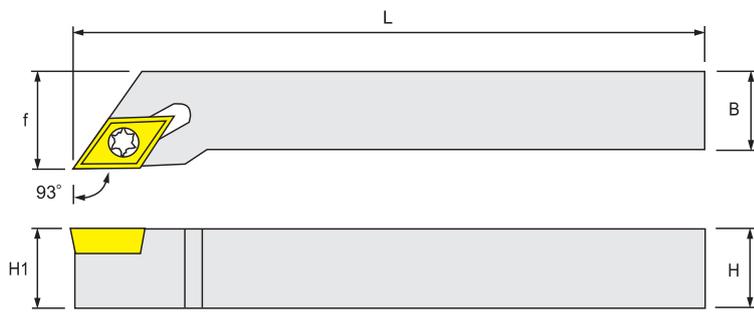

Right-hand shown

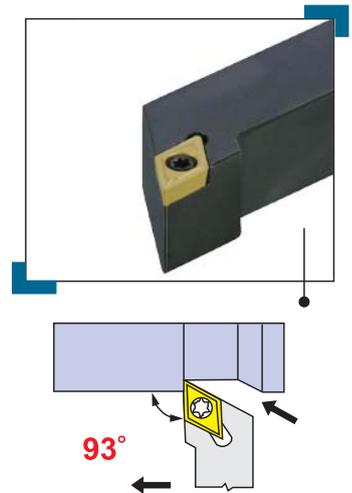


(Unit: mm)


Model No.	Dimensions					Insert	Screw	Wrench
	H	B	L	H1	f			
SDJCR/L-1010H-07	10	10	100	10	12	DC..0702..	MS2506A	ETF9
SDJCR/L-1212H-07	12	12	100	12	16			
SDJCR/L-1212K-07	12	12	125	12	16			
SDJCR/L-1616K-07	16	16	125	16	20			
SDJCR/L-2020K-07	20	20	125	20	25			
SDJCR/L-1212H-11	12	12	100	12	16	DC..11T3..	MS4011A	ETF15
SDJCR/L-1212K-11	12	12	125	12	16			
SDJCR/L-1616K-11	16	16	125	16	20			
SDJCR/L-2020K-11	20	20	125	20	25			
SDJCR/L-2525M-11	25	25	150	25	32			

* ISO inserts recommended.

SDNC

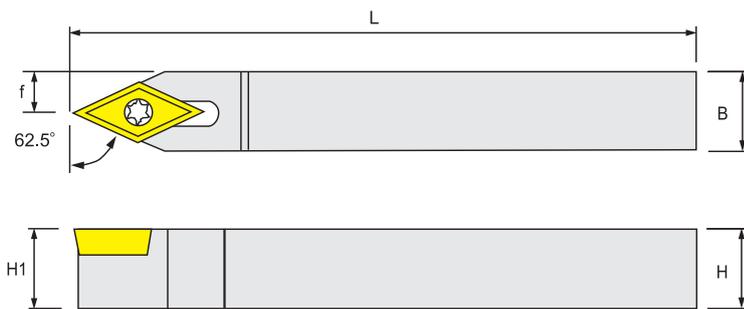

Right-hand shown

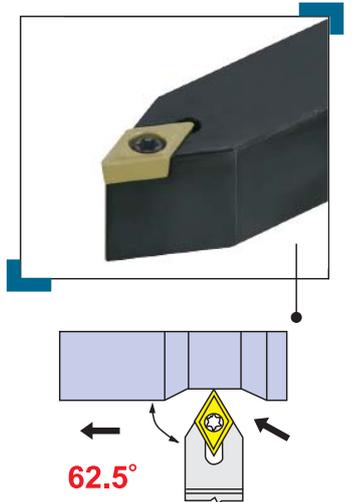

(Unit: mm)

Model No.	Dimensions					Insert	Screw	Wrench
	H	B	L	H1	f			
SDNCN-1010H-07	10	10	100	10	5	DC..0702..	MS2506A	ETF9
SDNCN-1212H-07	12	12	100	12	6			
SDNCN-1616K-07	16	16	125	16	8			
SDNCN-1212H-11	12	12	100	12	6			
SDNCN-1212K-11	12	12	125	12	6			
SDNCN-1616K-11	16	16	125	16	8	DC..11T3..	MS4011A	ETF15
SDNCN-2020K-11	20	20	125	20	10			
SDNCN-2525M-11	25	25	150	25	12.5			

* ISO inserts recommended.